


## INSTALLATION INSTRUCTIONS DOUBLE E-LOC® COUPLINGS METHOD 1

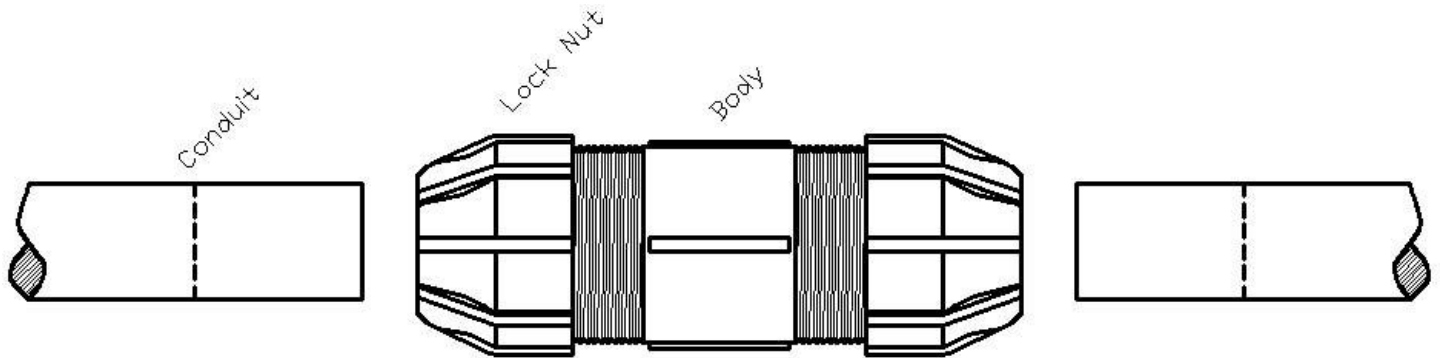


3  $\frac{1}{8}$ " Mark (for 1" to 1  $\frac{1}{4}$ " Double E-Loc)

3  $\frac{3}{8}$ " Mark (for 1  $\frac{1}{2}$ " Double E-Loc)


3  $\frac{7}{8}$ " Mark (for 2" Double E-Loc)

(Typical)

Loosen Lock Nuts until 1" of thread is visible on each side of body. Mark each conduit 3  $\frac{1}{8}$ " from the end (for 1" to 1  $\frac{1}{4}$ " sizes), 3  $\frac{3}{8}$ " from the end (for 1  $\frac{1}{2}$ " sizes) or 3  $\frac{7}{8}$ " from the end (for 2" sizes)

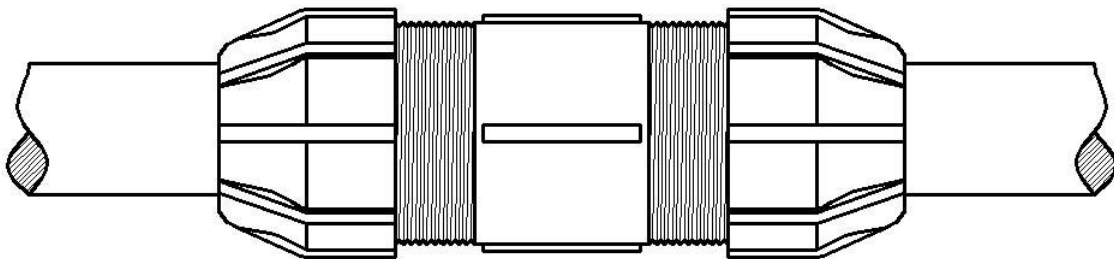

Push conduit into each end of Double E-Loc coupling body making sure the conduit is tight against the center stop.

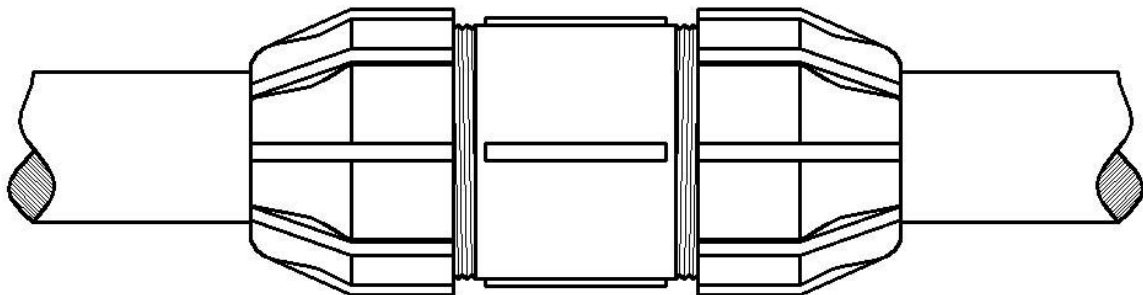

Tighten lock nut on each end of body hand tight.